

Universal Remote Control Model UH-AM433 Instructions

Turn On & Off



Ensure 9V PP3 battery is fitted correctly. Press and hold the power button, after a short while the green LED will illuminate. To turn off, press the power button again. The unit will automatically turn itself off after about 1 minute if unused.

Set the Program



See overleaf for the correct program for your mover. With the unit off, press and hold down the top button (Shown red in diagram). Whilst holding the top button, press the power button. The LED flashes, you may now loose the power button. Keep the top button depressed whilst counting the flashes. Each flash corresponds to the program number. Loose the top button when the correct program number is reached. i.e 3 flashes equals Program No. 3

View / Check the Program



With the unit off, press and hold down the reverse button (Shown red in diagram). Whilst holding this button down, press the power button. When the LED lights, you may then loose all buttons. The LED will flash a set number of times corresponding to the current program. There is a short delay, then the LED lights constantly, you can now use the unit.

LED Status



- No LED - Unit is switched off
- LED Constant on - Unit is switched on idle
- LED Fast Flash - A button is pressed
- LED Slow Flash - Low battery Voltage, change the battery.

Left & Right Swap



Manufacturers use different conventions for manouvering the caravan. If you find that your caravan goes left instead of right, this handset has a facility of quickly swapping these over. Your current selection is stored until either you change it by using this process again or by setting another program. Press & Hold the top two turn buttons (shown red in diagram), then press the power button. The process is complete when the LED illuminates (fast flash) you may now loose all buttons

Please Note

After you have correctly set your program into the handset, you must resynchronise the new handset to your controller, please follow the original manufacturers instructions on how to do this.

UH-AM433 Universal Caravan Mover Handset Programs

Locate the image of your original handset and choose the correct program
Please note this replacement handset is not suitable for autoengage mover systems



Carver Single Axle
Program #1 (1 Flash)



Carver Twin Axle
Program #2 (2 Flashes)



Powrtouch White Handset

E Spec has "www.powrwheel.com" moulded into rear of case




E Spec Single Axle - Program #3 (3 Flashes)
E Spec Twin Axle - Program #4 (4 Flashes)

T Spec (No moulding)
T Spec Single Axle - Program #5 (5 Flashes)
T Spec Twin Axle - Program #6 (6 Flashes)



PowrTouch M Spec or Rhyno

Single Axle - Program #7 (7 Flashes)
Twin Axle - Program #8 (8 Flashes)

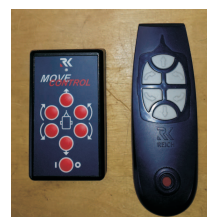

Reich

Single Axle - Program #9 (9 Flashes)
Twin Axle - Program #10 (10 Flashes)



PurpleLine Enduro

Single Axle - Program #11 (11 Flashes)

Please Note

After you have correctly set your program into the handset, you must resynchronise the new handset to your controller, please follow the original manufacturers instructions on how to do this.