

# Remote Control Model UH-C1101 Instructions

Compatible with PurpleLine Enduro & Quattro | Royal Titan & Hercules  
Towsure Movemaster | Riviera EasiMove

## Turn On & Off

Ensure 9V PP3 battery is fitted correctly.

Press and hold the power button, after a short while the green LED will illuminate. To turn off, press the power button again. The unit will automatically turn itself off after about 1 minute if unused.

When turned on, the sounder will indicate both the current program selected and whether it is in single or twin axle mode. i.e Program #1, Single Axle will be 1 beep, a short delay, then 1 beep. Program #4 Twin Axle will be 4 beeps (Prog #4), a short delay then 2 Beeps (Twin Axle). Note that twin Axle Mode is operational only in Quattro Program modes (#4 & #5)



## Set the Program

See overleaf for the correct program for your mover.

With the unit off, press and hold down the top button (Shown red in diagram). Whilst holding the top button, press the power button. The sounder indicates current program, you may now loose the power button. Keep the top button depressed whilst counting the beeps. The program will increment and is denoted by the number of beeps increasing by one. Loose the top button when the correct program number is reached. i.e 3 beeps equals Program No. 3



## Set Single or Twin Axle Mode

Twin Axle operation is possible only for Quattro Program Modes (#4 & #5)  
With the unit off, press and hold down the lower left button, whilst holding this button turn on the handset, you will hear 2 beeps indicating Twin Axle Mode. To reset to Single Axle, repeat using the upper left button, a single beep confirmation will now be given.



## LED & Sounder Status

- No LED - Unit is switched off
- LED Constant on - Unit is switched on idle
- LED Fast Flash - A button is pressed
- LED Slow Flash - Low battery Voltage, change the battery.

When the unit is first switched on, the unit will emit it's current Program mode together with whether it is configured for Single or Twin Axle mode, please read the top paragraph for details.

If there is no communication with the main control box, the handset will emit a beep once every 2 Seconds.




### Please Note

After you have correctly set your program into the handset, you must resynchronise the new handset to your controller box, please follow the original manufacturers instructions on how to do this or follow instructions overleaf.

# UH-CC1101 Caravan Mover Handset Programs

Locate the image of your original handset and choose the correct program

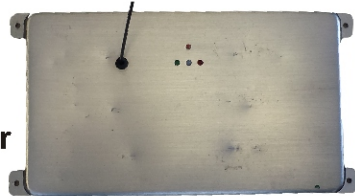


**Royal Titan & UM203, UM303 etc  
Riviera EasiMove, Towsure Movemaster  
Program #1 (1 Beep)**



**PurpleLine Enduro or Ego  
Program #2 or #3  
(2 or 3 Beeps)**

It could be either - Try #2 first then #3

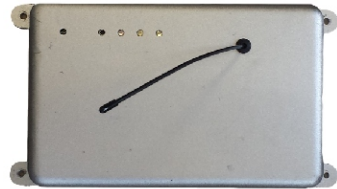

**PurpleLine Quattro  
Program #4 or #5  
(4 or 5 Beeps)**

It could be either - Try #4 first then #5



## Important - After setting up your handset you must synchronise it to your control box

1. With the handset turned off, turn on control box and press it's reset button, the green LED starts to flash.
2. Release the reset button, now turn on your handset. If it is the correct program the LED will now flash faster.
3. Press the reset button again, the LED should now go solid green. The two are now synchronised.
4. If the green LED does not change when the handset is turned on, reconfigure the handset to another Program and repeat the process from step 1.