

UH-NRF905B Truma Mover Handset Programs

Compatible with Truma S, SE, TE, SR, SER, TER, GO2, CM, TrumoveS, Trumove & PowrTouch Blue models

This set of instructions covers handset operation when set to Truma modes (Programs # 1,2 or 3)

For Instruction on PowrTouch Models, please consult the other instruction sheet

Turn On & Off



Ensure 9V PP3 battery is fitted correctly.

Press and hold the power button, after a short while the green LED will illuminate, To turn off, press the power button again.

When turned on, the sounder will initially indicate both the current program selected, ie 3 rapid beeps for Program #3

Set the Program



See overleaf for the correct program for your mover.

With the unit off, press and hold down the top button (Shown red in diagram). Whilst holding the top button, press the power button. The sounder indicates current program, you may now loose the power button. Keep the top button depressed whilst counting the beeps. The program will increment and is denoted by the number of beeps increasing by one. Loose the top button when the correct program number is reached. i.e 3 beeps equals Program #3

LED & Sounder Status



- No LED - Unit is switched off
- LED Constant on - Unit is switched on and communicating with control unit
- LED Fast Flash - A button is pressed
- LED Slow Flash & chirp - Not communicating with control unit or fault on control unit (please refer to fault finding chart downloadable from our website)

Unit will automatically switch off after 3 minutes of inactivity under normal operation or 30 Seconds inactivity if not linked to a control box

Please Note

After you have correctly set your program into the handset, you must resynchronise the new handset to your controller box, please follow the original manufacturers instructions on how to do this or follow instructions overleaf.

UH-NRF905B Truma Caravan Mover Handset Programs

Locate the image of your original handset and choose the correct program
For instructions on configuring this handset to PowrTouch models, please consult the other set of instructions



Single Axle Manual Engage M2 S, SR, Go2, Truma CM Program #1 (1 Beep)

60030-31800
60030-48200
60030-87100



60030-31600
60030-48400

Single Axle Auto Engage M2 SE, SER, Trumove S Program #2 (2 Beeps)



60030-31700
60030-48600

Twin Axle Auto Engage M2 TE, TER, Trumove T Program #3 (3 Beeps)

Important - After setting up your handset you must synchronise it to your control box

1. With the handset turned off, turn on control box, it's red LED should be flashing slowly.
2. Press and hold the reset button on the control box, after about 2 seconds, the red LED starts to flash faster, keep the button pressed and after a further 5 Seconds, the LED speeds up yet again. Now release the button.
3. Hold down the reverse button and turn on the handset, you should hear a long beep from the handset followed by a chatter of relays. The reverse button can be released and the two are now synchronised and ready for use.

Problems

You must turn on the handset within 5 Seconds of releasing the reset button
If the handset continues to chirp or the unit fails to react to any button presses after correctly synchronising then there could be a fault elsewhere please ring us for more information or consult the fault finding flowchart downloadable from our website.

