

M1 Remote Control Model UH-FM433 Instructions



Turn On & Off

Ensure 9V PP3 battery is fitted correctly.
Press and hold the power button, after a short while the green LED will illuminate, To turn off, press the power button again. The unit will automatically turn itself off after about 1 minute if unused.



LED Status

- No LED - Unit is switched off
- LED Constant on - Unit is switched on idle
- LED Fast Flash - A button is pressed
- LED Slow Flash - Low battery Voltage, change the battery.

Left & Right Swap



Manufacturers use different conventions for manouvering the caravan. If you find that your caravan goes left instead of right, this handset has a facility of quickly swapping these over. Your current selection is stored until either you change it by using this process again.
Press & Hold the top two turn buttons (shown red in diagram), then press the power button. The process is complete when the LED illuminates (fast flash) you may now loose all buttons

Synchronisation Instructions

All following instructions assume that the controller (part fitted in caravan) is wired to motors and has a stable 12V supply. Ensure the handset has a good 9V battery. Start the process with the handset turned off.

- Press and hold reset button on controller until green LED lights.
- Release reset button, LED should be flashing
- Turn on handset
- Units should now synchronise, you should hear the clicking of relays to confirm
- LED on controller should now be lit.