

Synchronisation Instructions

Locate the image of your original handset and choose the correct technique to synchronise the new handset to your original control unit. All following instructions assume that the controller (part fitted in caravan) is wired to motors and has a stable 12V supply. Ensure the handset has a good 9V battery and is correctly configured for the controller model (See main instructions). Start the process with the handset turned off.

Carver Single Axle



- Press and hold reset button on controller until LED lights.
- Release reset button, LED should be flashing
- Turn on handset
- Units should now synchronise, you should hear the clicking of relays to confirm
- LED on controller should now be lit.

Carver Twin Axle



- Press and release reset button on controller, green LED should be flashing
- Turn on handset
- Units should now synchronise, you should hear the clicking of relays to confirm
- LED on controller should now be lit.

PowrTouch / Rhino



- Press and release reset button on controller, red LED should be flashing
- Turn on handset,
- Dependant upon model, you may need to press any movement button on the handset
- Units should now synchronise, red LED on controller should now be constantly lit.



Reich



- Press **and hold** reset button on controller.
- Turn on handset, LED on controller should illuminate.
- Turn off handset, LED on controller should go off.
- Release reset button on controller
- Turn handset back on, units should now synchronise, you should hear the clicking of relays to confirm (LED on controller does not illuminate).
- All the above steps to be completed within 4 seconds.

PurpleLine Enduro



- Press and hold reset button on controller until red LED lights.
- Release reset button, red LED flashes slowly
- Turn on handset, red LED flashes quickly
- Press & release reset button on controller, units should now synchronise, you should hear the clicking of relays to confirm, red LED on controller should now be lit.